


FASTEN A TEGRATITE PLUS OR
TEGRATITE PATCH OVER
THE DAMAGED AREA

TEGRATITE OR
TEGRATITE PLUS

APPLY TEGRASEAL CURETITE
MASTIC AROUND PERIMETER EDGE

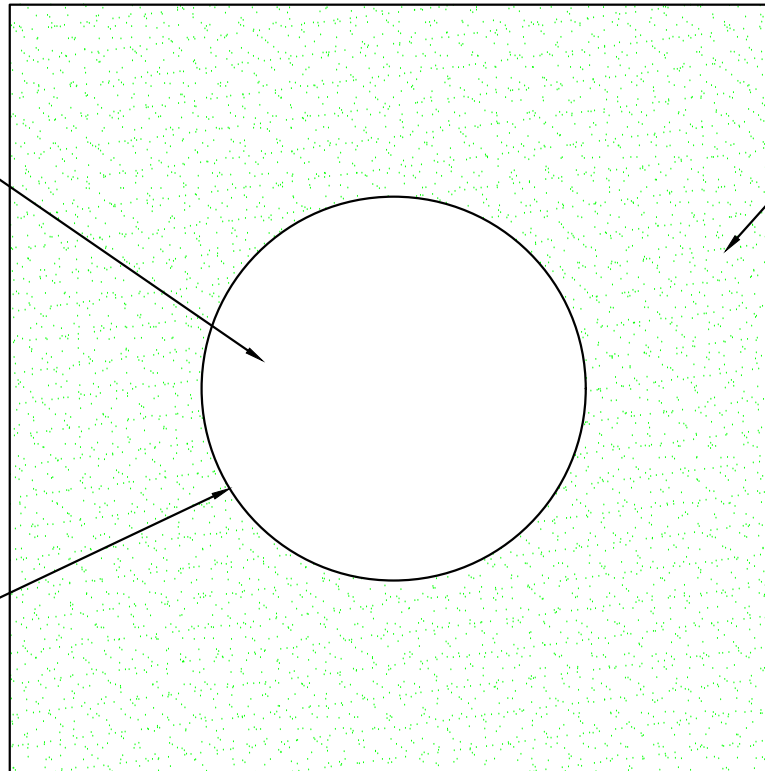

NOTES:

1. OVERLAP 3" MIN. AND SECURE WITH NAILS AND WASHERS OR WIDE CROWN STAPLES IN THE OVERLAPPED AREAS
2. APPLY A PATCH OF TEGRATITE PLUS 2" BEYOND THE DAMAGED AREA AND APPLY TEGRASEAL CURETITE AROUND PERIMETER



Tel: 952-888-1816
Web: www.tegraseal.com

TEGRATITE, TEGRATITE PLUS OR TRIPLESEAL REPAIR DETAIL

Designed	JF	2023
Drawn	TB	2023
Approved	JF	2023
FILE NAME: 0202-120		
SCALE: N.T.S.		